

Access

Remote key Control

C3 Aircross Access the remote control can be used to unencumber and lock the car, spark off or deactivate the alarm, locate the car and, relying at the model, open the gas tank cap. It additionally includes a conventional key for manually locking or unlocking the car and starting or switching off the engine. To free up the car, press the unlocking button. To lock it, transfer off the ignition and press the locking button. If required, press the locking button again inside three seconds to impasse the vehicle. Deadlocking disables the indoors door controls, so never leave each person in the automobile whilst the usage of this feature.

If a door or the boot isn't completely closed, vital locking might not take location. If the vehicle is unlocked but no door or the boot is opened, it robotically locks once more after approximately 30 seconds. If geared up, the alarm is also reactivated. If the far flung manipulate does not paintings due to the fact its battery or the vehicle battery is discharged, or because of a malfunction, the automobile may be locked or unlocked manually the usage of the key. Insert the key into the door lock and turn it to liberate or lock the automobile.

The far flung manage is a touchy excessive-frequency device. Avoid pressing its buttons whilst it's far on your pocket or whilst you are out of doors the automobile's working variety. Do no longer regulate the electronic immobiliser, as this may motive malfunctions. If the keys or remote manipulate are misplaced, contact a CITROËN dealer with the vehicle registration documents, identification and, if to be had, the important thing code label.

Doors

From out of doors, liberate the car with the far off control or key, then pull the door manage to open the door. From interior, pull the indoors door cope with to liberate the vehicle. With the car unlocked, press the tailgate manipulate and raise the tailgate. To close it, lower the tailgate the usage of one of the interior take hold of handles. The tailgate isn't always designed to help a bicycle carrier. If it becomes difficult to open or near, have it checked by a CITROËN provider or qualified workshop to save you further issues or the tailgate from losing suddenly.

After changing the faraway control battery or if the faraway manipulate develops a fault, it is able to need to be reinitialised. Switch off the ignition, flip the critical element to the ignition-on role, right now press and hold the closed-padlock button for some seconds, then switch off the ignition and do away with the essential component. If the automobile battery or imperative locking fails, the tailgate can be unlocked manually. Fold the rear seats to get admission to the tailgate lock from in the boot and release the lock.

Used faraway control batteries can gift a hazard of explosion or leaking flammable liquid or gasoline. Do not burn, overwhelm or cut a used battery, and do no longer use or keep it in extraordinarily excessive temperatures or very low pressure.

Boot

C3 Aircross Access the crucial locking device allows the doors and boot to be locked or unlocked from within the automobile. Press the primary locking button to fasten or liberate the automobile. If any the front or rear door is open, important locking does no longer operate. Above five km/h, the doorways and boot lock mechanically while using. When the car is locked or deadlocked from outside, the indicator lamp flashes and the crucial locking button is deactivated. After normal locking, pulling an interior door manage unlocks the automobile.

After deadlocking, the vehicle have to be unlocked the usage of the faraway manipulate. If the boot is open while transporting long or bulky gadgets, press the vital locking button to lock the doorways. Otherwise, when the automobile exceeds 5 km/h, the locks may additionally rebound and an alert may also seem. The alarm machine facilitates guard the automobile towards theft and wreck-ins. Exterior perimeter tracking detects attempts to open the doorways, boot or bonnet. Interior volumetric tracking detects modifications in the passenger compartment, whilst anti-tilt tracking detects adjustments inside the automobile's function.

Central Locking

Insert a small screwdriver into hollow A of the lock to free up the boot, then circulate the latch to the left. The indicator lamp comes on to confirm that the vehicle is centrally locked. Press the critical locking button to unlock the vehicle. Above 5 km/h, this unlocking is transient. Central locking does no longer take

location if any the front or rear door is open, although commencing the boot does no longer prevent the primary locking system from running. If the fault stays after closing the boot again, the boot will live locked.

In the event of a critical locking machine fault, disconnect the battery to lock the boot and make certain the car is absolutely locked. When the automobile is locked or deadlocked from outdoor, the indicator lamp flashes and the central locking button is deactivated. After regular locking, pull an indoors door manage to unlock the vehicle. After deadlocking, the automobile have to be unlocked the use of the far off manipulate. The significant locking gadget protects the vehicle and helps prevent robbery and destroy-ins.

The doors and boot lock routinely whilst driving above 5 km/h. C3 Aircross Access the alarm machine consists of outdoors perimeter tracking, which detects attempts to open the doorways, boot or bonnet. Interior volumetric tracking detects changes within the passenger compartment, inclusive of a damaged window or motion in the car. Anti-tilt tracking detects modifications in the vehicle's role. When transporting long or bulky objects with the boot open, press the relevant locking manipulate to lock the doors. Otherwise, while the automobile exceeds 5 km/h, the locks may additionally rebound and an alert can be displayed.

Electric Window

To deactivate the monitoring functions, unlock the vehicle the use of the important thing within the front left-hand door lock. To reactivate all monitoring, lock the automobile using the far flung manage. The red indicator lamp flashes every 2d whilst the tracking functions are lively. To lock the automobile with out activating the alarm, lock it the usage of the key inside the the front left-hand door lock. Depending on the version, the alarm is activated robotically 2 minutes after the last door or the boot is closed. To keep away from triggering the alarm when getting into the automobile, press the unlocking button at the faraway control.

When the alarm is brought about, the siren sounds and the route indicators flash for 30 seconds. Rapid flashing of the pink indicator lamp after unlocking indicates that the alarm became triggered whilst the automobile changed into unattended. A constant pink indicator lamp whilst the ignition is switched on shows a device malfunction. Have it checked by using a CITROËN provider or

certified workshop. These warning lights Citroen C3 dashboard symbols indicate the alarm status or a possible system malfunction. To open or near the electrical window manually, press or pull the transfer without passing the resistance factor.

C3 [Aircross](#) Access the window stops whilst the switch is released. Depending on the version, urgent or pulling the switch beyond the resistance factor opens or closes the window completely. Pressing the switch again stops the motion. The electric powered window controls stay operational for about 45 seconds after switching off the ignition or locking the vehicle. After this time, the controls are disabled and can be reactivated by means of switching at the ignition or unlocking the car. For children's safety, press manipulate 5 to deactivate the rear electric window controls. The crimson indicator lamp comes on and stays lit till the controls are reactivated.

If a window meets an obstacle whilst last, the anti-pinch characteristic stops the window and partially lowers it again. After the anti-pinch function is precipitated, test that there are not any obstacles and try to near the window again. After reconnecting the battery or if the window moves abnormally, the electrical windows should be reinitialised. Lower the window completely, then raise it in steps until it's miles absolutely closed. Continue to pull the manage for as a minimum one second after the window reaches the closed role.

If the anti-pinch characteristic is caused 3 times in a row, it will become inoperable. Automatic and remote window final are then no longer available, and the window can best be closed manually. When working the electric windows, ensure nothing can save you the home windows from remaining well. Pay unique interest to children and passengers. Do not put your head or palms thru an open window even as the vehicle is shifting.