

Light Vision

Exterior Lights and Headlight Controls

The Audi RS6 features computerized lighting fixtures that adjust to surrounding conditions. In AUTO mode, the headlights activate whilst the light sensor detects low visibility. You can also pick out dipped headlights, side lighting fixtures or switch the lighting fixtures off while approved. The driver stays accountable for using the correct lights, mainly in fog, darkness or poor climate, because the computerized device might not detect every circumstance. The turn signal and principal beam lever controls indicators, parking lighting and high beams. A short motion of the lever activates the turn signal 3 instances, even as the principle beam assist can routinely adjust the excessive beams when enabled inside the vehicle settings.

On ready fashions, Matrix LED headlights can hold more of the street illuminated at the same time as decreasing glare for different drivers. Avoid the use of excessive beams when they may dazzle oncoming visitors. Additional lights features may consist of adaptive headlights for stepped forward visibility round bends and intersections, entry and exit lights that remove darkness from the area around the automobile, and adjustable digital mild signatures. These functions and their settings depend on the car's equipment. The rear fog mild have to best be used consistent with nearby visitors policies.

Lighting Warnings and Safety

If a flip signal flashes faster than ordinary or a lighting fixtures warning seems on the device cluster, a bulb or lights gadget may also have a fault. Automatic headlight range manipulate or most important beam help might also become unavailable. If a warning persists, have the automobile checked by a certified workshop. In damp or bloodless weather, brief mist can also shape inside the mild devices and should clear after the lights are switched on.

The hazard warning lighting alert different road customers whilst the vehicle gives a chance. Press the danger warning button to prompt or deactivate them. They may also switch on mechanically for the duration of sure emergency braking situations, depending at the car's system.

Interior Lights

The Audi RS6 allows you to control the the front and rear interior lighting fixtures the usage of the switches or touch-touchy analyzing-mild controls. On geared up models, you may alter reading-mild brightness via touching and preserving the control. The ambient lighting settings within the MMI can help you change brightness and shades, pick out preset issues and hyperlink the lighting to Audi strength pick out modes. Functional lights also can alert you to certain situations, together with an open door or an energetic turn signal.

If the moderate or rain sensor fails, the dipped headlights may moreover moreover stay on whilst the lighting fixtures manage is ready to AUTO. Have the gadget inspected via manner of a qualified workshop if the warning persists. The outside reflect controls are located on the purpose pressure's door. Select the left or proper mirror, then use the control pad to modify its function. If your RS6 has power-folding mirrors, press the folding button to retract or growth them. Depending on the automobile's settings, the mirrors also can fold automatically on the same time as you lock the car.

The automated reducing function tilts the chosen reflect down on the same time as opposite device is engaged, helping you notice the kerb at the same time as parking. Press the function button to activate it, and alter the reflect feature if desired. The mirror can go returned to its regular role while you switch off the car, strain earlier above about 15 km/h, or deactivate the function.

Wide-perspective mirrors offer a broader view however make cars appear smaller and farther away, so determine distances cautiously at the same time as changing lanes.

If a strength-folding mirror is knocked out of role, use the electric manipulate to go again it to area as opposed to forcing it via hand. Before getting into an automated car wash, fold the mirrors in as preferred. To lessen glare from headlights behind you, pull the lever underneath the guide anti-glare interior replicate in the route of you. If the electric mirror adjustment stops operating, the replicate glass can be adjusted lightly with the useful resource of hand.