

Access

Keys / Remote Control

The key may be used to begin and transfer off the engine and to lock or free up the vehicle. The far off manipulate provides handy locking and unlocking capabilities. To lock the car, press the locking button on the faraway manage. The direction signs flash as soon as to confirm that the vehicle is locked. If selective unlocking is activated, the first press unlocks the driver's door most effective. Press the button twice quick to free up the opposite doors and the boot. If the automobile is unlocked however no door or the boot is opened, it automatically locks again after approximately 30 seconds. The automobile can also be locked or unlocked manually with the important thing.

Turn the important thing anticlockwise inside the motive force's door lock to lock the vehicle, or clockwise to release it. Make positive the doors and boot are fully closed before locking. The locating characteristic allows you find the automobile from a distance when it's far locked. Press the finding button to make the path signs or, relying at the version, the sunlight hours going for walks lamps or sidelamps flash or illuminate for some seconds.

The far off manage is a sensitive high-frequency device. Avoid pressing its buttons whilst it's far on your pocket or while you are out of variety of the car. If the keys or far off manage are lost, touch a CITROËN dealer with the car registration files and, if available, the key code label. For manual locking from internal, use the knob on the driving force's door deal with. If relevant locking isn't operating due to a fault or a discharged battery, use the guide key-locking technique.

As a safety precaution, get rid of the key from the ignition when leaving the vehicle and do not adjust the digital immobiliser. The automated central locking function locks the doors and boot when the automobile is journeying above approximately 10–eleven km/h.

Central Locking

If the keys or faraway control are misplaced, contact a Citroen C3 Aircross User Manuals dealer with the car registration certificates, a private identity record and, if to be had, the important thing code label. The dealer can retrieve the important

thing and transponder codes needed to order a substitute key. The faraway manage is a touchy excessive-frequency tool. Avoid urgent its buttons while it's miles to your pocket, as this could by accident release the automobile. Also avoid time and again urgent the buttons whilst you are out of variety, as the far off manage may forestall running and want to be reset.

If the primary locking device is not running due to a fault or a discharged battery, the car may be locked or unlocked manually using the motive force's door lock. Turn the key anticlockwise to fasten the door or clockwise to release it. From in the automobile, use the guide knob on the driver's door to fasten or liberate the doors. The relevant locking does no longer function if a door is open. For safety, take away the key from the ignition whilst leaving the vehicle, even for a brief time. Do now not modify the electronic immobiliser, as this will purpose malfunctions.

The computerized imperative locking characteristic locks the doors and boot while the car is journeying above approximately 10–11 km/h.

Changing the remote Control Battery

To open a door from internal, pull the interior door deal with. This unlocks the car absolutely. If a door isn't always nicely closed, a caution lamp and an audible sign appear whilst the automobile is travelling above five km/h. To open the boot from outdoor, unlock the car and press the switch positioned at the lowest of the tailgate. Then raise the tailgate. To near it, use the indoors clutch take care of and lower the tailgate securely.

If the tailgate isn't nicely closed, a caution lamp and audible signal appear while riding above five km/h. If the boot can not be opened due to a battery or valuable locking failure, fold the rear seats to access the lock from within the boot. Press the release lever within the route of the arrow to liberate the boot manually. To update the faraway manage battery, use a ****CR2032 3V**** battery. Hold the key blade and pull the key cover inside the contrary route to open it.