

Comfort

Correct Driving Position

Before riding, modify the driving role in the following order: seat backrest perspective, seat cushion height, longitudinal seat role, guidance wheel top, and rear-view and door mirrors. Make positive the seat belt is mounted earlier than setting off. For longitudinal seat adjustment, raise the manipulate bar and slide the seat forwards or backwards to the favored role. Release the bar to lock the seat securely on the runners.

Front Seats

Adjust the seat backrest angle, seat cushion peak, longitudinal seat function, guidance wheel top, and rear-view and door mirrors. Fasten the seat belt and make certain the device panel can be considered definitely from your driving function. For longitudinal seat adjustment, enhance the manipulate bar and slide the seat forwards or backwards. Release the bar to fasten the seat securely in role. Adjust the head restraint height to suit your driving function. Only regulate the guidance wheel whilst the car is desk bound.

Hold the steering wheel with one hand, pull the control lever to launch it, and regulate the peak as required. Push the lever lower back to lock the steerage wheel securely. Adjust the door mirrors while the automobile is desk bound. The passenger-aspect mirror can make items seem farther away than they certainly are, so use the interior mirror or look over your shoulder whilst judging distances. Do now not regulate the mirrors whilst riding, as this may distract you and have an effect on car control. If geared up, the driver's armrest can be raised to the vertical role or decreased lower back into its regular function for use.

Steering Wheel

Adjust the steering wheel to a snug riding position. Only make this adjustment whilst the automobile is desk bound. Hold the steering wheel with one hand, pull the manipulate lever to release it, and adjust the height as required. Push the lever returned to fasten the steerage wheel securely. Adjust the door mirrors on the identical time as the automobile is stationary.

Do not adjust them at the same time as driving, as this can have an effect for

your control of the automobile. Objects within the passenger-facet reflect might also seem farther away than they clearly are, so use the indoors reflect or appearance over your shoulder while judging distances. If outfitted, the driving force's armrest can be raised to the vertical role until it locks in region. Lower it again to go back it to the normal position to be used.

Door Mirrors

For electric door mirrors, flip manipulate A to select the desired reflect, then flow the manipulate in any of the 4 directions to regulate it. Return the manage to the vital position when finished. On variations with guide adjustment, circulate the replicate at once to the desired function. The door mirrors may be folded manually whilst wished, which include whilst parking in a slim area. Turn the reflect toward the automobile. If a reflect is moved from its regular role, push it lower back into location manually while the vehicle is stationary.

The rear-view replicate may be adjusted to provide a clean view at the back of the vehicle. Depending on the version, it is able to have an anti-dazzle function that reduces glare from sunlight and the headlights of other vehicles. Pull the lever to pick the night position and push it lower back for the everyday day position. Adjust the pinnacle restraint in order that its upper side is stage with the pinnacle of the occupant's head. Pull the head restraint upwards to elevate it. To lower it, press lug A and move the head restraint right down to the specified role.