

Instrument

Digital Instrument

The Econometer Leaf facilitates the motive force apprehend the automobile's modern-day fuel intake and encourages greater low-cost and environmentally friendly driving. The gadget affords a visible indication of gasoline consumption primarily based on the modern-day driving style. The display makes use of eco bars and a leaf image to show how efficiently the vehicle is being pushed. When gasoline intake is high, fewer eco bars are displayed and the leaf symbol seems pink. This suggests that the car is the usage of greater gas at that mome.

Dashboard Information

Fuel gauge – Shows the modern gasoline level. Remaining variety – Displays the approximate distance that can be travelled with the to be had fuel, in miles or kilometres. Gear performance indicator – Helps indicate whilst changing equipment might also improve fuel performance. Total distance recorder – Shows the whole distance travelled by the automobile. Digital speedometer – Displays the current automobile pace in mph or km/h. Coolant temperature indicator – Shows the engine coolant temperature in °C.

Warning & Indicator Lamps

The Citroen C3 Aircross User Manuals device panel makes use of more than a few warning and indicator lamps to keep the riding pressure informed about the auto's systems and jogging scenario. These symbols can imply that a device is active, a characteristic has been switched on or off, or that a fault may additionally require interest.

Some lamps seem in quick even as the ignition is switched on and need to typically go out after the engine starts offfevolved offfevolved. If a warning lamp stays illuminated or flashes on the equal time as the use of, take a look at its which means inside the guide and follow the recommended movement to hold the auto steady and nicely maintained.

Engine Coolant Temperature

The Service Indicator shows while the following service is due. The provider alert

seems whilst either the desired distance or the service time is reached, whichever comes first. When a provider is due, a caution message seems within the instrument cluster every time the ignition is switched on till the service is completed and the system is reset. Have the car serviced as quickly as feasible.

The Trip Computer displays records consisting of the odometer, Trip A, Trip B, average pace, common fuel economic system (AFE), Distance to Empty (DTE), rev counter, beneath-inflation detection and the Econometer display. With the engine going for walks, press the Navigate Up button on the steering wheel to transport thru the to be had records. Press and hold the OK button to reset Trip A, Trip B, common fuel financial system and average speed. The Engine Coolant Temperature Indicator shows the coolant temperature.

In Zone A, the temperature is correct. In Zone B, the temperature is simply too excessive, and a crimson warning lamp with an audible sign seems. Stop the car as soon as it's far secure to accomplish that. After switching off the ignition, wait a few minutes before carefully commencing the bonnet and checking the coolant level.