

Lighting

Main lighting

For electric door mirrors, flip manipulate A to select the desired reflect, then flow the manipulate in any of the 4 directions to regulate it. Return the manage to the vital position when finished. On variations with guide adjustment, circulate the replicate at once to the desired function. The door mirrors may be folded manually whilst wished, which include whilst parking in a slim area. Turn the reflect toward the automobile. If a reflect is moved from its regular role, push it lower back into location manually while the vehicle is stationary.

The rear-view replicate may be adjusted to provide a clean view at the back of the vehicle. Depending on the version, it is able to have an anti-dazzle function that reduces glare from sunlight and the headlights of other vehicles. Pull the lever to pick the night position and push it lower back for the everyday day position. Adjust the pinnacle restraint in order that its upper side is stage with the pinnacle of the occupant's head. Pull the head restraint upwards to elevate it. To lower it, press lug A and move the head restraint right down to the specified role.

Direction Indicators

To perform the direction indicators, flow the lighting manipulate stalk down for a left turn or up for a proper turn, past the point of resistance. For 3 flashes, briefly press the stalk up or down with out passing the point of resistance. The headlamp beam height ought to be adjusted in keeping with the car load to avoid astounding different street users.

For a motive force handiest or a driving force with one passenger, use function 0. As more passengers or luggage are added, use the higher settings according to the car version and load. For motors with seven seats, alter the setting in keeping with the wide variety of occupied seats and the quantity of bags in the boot.