

Particle Information

[Fuel Compatibility & Refuelling](#)

Use petrol that complies with the EN228 fashionable and consists of up to 5% or 10% ethanol, as relevant. Only use petrol gas components that meet the B715001 preferred. Before refuelling, always switch off the engine. Do not refuel at the same time as the Stop ; Start system is in STOP mode or the e-Auto machine is on standby. Select the proper fuel type according to the vehicle's engine and the label inside the gas filler flap. With the car unlocked, press the rear-imperative a part of the gasoline filler flap to open it.

Turn the filler cap to the left, cast off it and place it on the holder inside the flap. Insert the fuel nozzle absolutely earlier than starting to refuel to reduce the danger of fuel splashing. C3 Aircross Practical do no longer retain refuelling after the nozzle has cut out for the third time, as this may reason malfunctions. After refuelling, replace the filler cap and flip it to the proper, then near the fuel filler flap.

The fuel tank capability is about 44 litres, with a reserve stage of about 5 litres. When the low fuel warning appears, refuel as quickly as feasible to avoid jogging out of fuel. At least 5 litres need to be added for the fuel degree to be registered by the gauge. If the wrong fuel has been brought, do no longer start the engine. The gas tank ought to be tired and packed with the correct gas first. When touring abroad, check the desired gas type and octane score, as gasoline specifications may additionally range among nations.

[Bonnet](#)

Load reduction mode manages sure vehicle functions in keeping with the remaining battery charge. When essential, it temporarily deactivates functions including the air conditioning and heated rear display screen. These capabilities are automatically restored when situations permit. The engine cooling fan may additionally hold jogging after the engine has been switched off. Keep apparel and gadgets away from the cooling fan and different shifting additives to avoid injury. Before operating below the bonnet, transfer off the ignition. On automobiles with Stop & Start or e-Auto, ensure there is no danger of the engine restarting robotically.

On electric powered motors, check that the READY indicator is off and disconnect the charging nozzle if it's far connected. To open the bonnet, open the left-hand the front door and pull the indoors release lever positioned at the lowest of the door body. Lift the outside safety seize and lift the bonnet. Unclip the support stay and vicinity it in the aid slot to keep the bonnet open. When the engine is hot, take care when coping with the protection catch and bonnet live because of the chance of burns.

To near the bonnet, take away the support live and stable it in its housing. Lower the bonnet and release it close to the give up of its tour, then pull on it to ensure it's far well locked. The engine compartment format varies depending at the automobile version. Depending at the powertrain, it can contain the screenwash reservoir, coolant reservoir, brake fluid reservoir, battery and fuses, fusebox, air filter out, engine oil filler cap and oil dipstick. Electric vehicles even have a 400 V electric circuit and an emergency circuit-breaker.

Check the required fluid levels regularly consistent with the producer's carrier schedule and pinnacle them up while important. If a fluid stage drops notably, have the corresponding machine checked through a CITROËN provider or qualified workshop. Because electric device is gift beneath the bonnet, limit publicity to water inclusive of rain or washing.

[Engine Compartment](#)

C3 Aircross Practical the engine compartment format can also range relying on the automobile version. The places of the air filter, engine oil dipstick and engine oil filler cap can also fluctuate among models. Depending on the powertrain, the engine compartment may also comprise the screenwash fluid reservoir, engine coolant reservoir, brake fluid reservoir, battery and fuses, fusebox and different related components.

Electric models even have a 400 V electric circuit and an emergency circuit-breaker for emergency offerings and upkeep technicians. To near the bonnet, do away with the aid stay from its slot and steady it in its housing. Lower the bonnet and launch it close to the stop of its journey, then pull on the bonnet to ensure it is correctly locked.

Check the desired fluid levels often in step with the producer's provider time

table and top them up when important. If any fluid degree drops notably, have the corresponding gadget checked by way of a CITROËN supplier or certified workshop. The fluids used within the car should follow the producer's necessities and be suitable for the vehicle's engine. Because electric device is gift beneath the bonnet, exposure to water inclusive of rain or washing need to be restricted.

Checking Fluid Levels

Check the [automobile's](#) fluid ranges often in step with the producer's carrier schedule and the necessities of the engine. Use most effective fluids and merchandise that meet the manufacturer's specifications. If a fluid degree drops drastically, have the corresponding machine checked by way of a CITROËN supplier or qualified workshop. Check the engine oil stage with the automobile on degree ground and the engine switched off for at least half-hour. Depending at the car model, the extent may be checked the usage of the instrument panel oil gauge or the dipstick.

The oil degree have to be among the MIN (B) and MAX (A) marks. If it's miles below the minimum mark, top up the oil. If it's miles above the most mark, do not begin the engine and feature the car checked. Add engine oil in small portions to avoid spills, wait a couple of minutes and take a look at the extent again. Use best engine oil suitable for the engine and advocated in the provider agenda. Do now not use engine oil components. For petrol and hybrid versions, test and pinnacle up the coolant best whilst the engine is bloodless.

The coolant level must be near the MAX mark and have to now not exceed it. If the level is near or beneath the MIN mark, top it up as required. The cooling system is pressurised, so do now not open the coolant cap while the engine is warm. The brake fluid level have to be close to the MAX mark. If it's far near or underneath the MIN mark, have the machine checked by a CITROËN dealer or qualified workshop. Use most effective DOT4 brake fluid from a sealed box and follow the producer's provider agenda for alternative. Top up the screenwash fluid when important. In temperatures under 0, us

Vehicle Maintenance Checks

The tyre pressures demonstrated on the auto's tyre stress label follow to cold tyres. If the car has been driven for introduced than 10 mins or over 10 km (6

miles) at speeds above 50 km/h (31 mph), upload zero. Three bar (30 kPa) to the advocated strain. Under-inflated tyres boom strength consumption, put on out greater speedy and decrease avenue preserving. Regularly test the scenario of the tyres, tread, sidewalls and rims, and make certain the valve caps are geared up. Replace tyres when the tread intensity reaches 1.6 mm or the damage and tear signs and symptoms aren't recessed.

Worn or broken tyres lessen braking and road-maintaining simple usual overall performance. Use simplest the wheel and tyre sizes positive for the car, as particular sizes or combinations can have an effect on coping with, tyre lifestyles and exceptional car capabilities. Free-wheeling mode may be required at the same time as towing the car, using a rolling street or automatic automobile wash, or transporting it through rail or sea.

The method relies upon at the gearbox and parking brake type. For an automatic gearbox or stress selector, pick out out N and manually release the electrical parking brake. When the auto is in free-wheeling mode, stay indoors it and in no way depart it unattended. For automobiles with a manual gearbox and manual parking brake, prevent the automobile with the engine walking and press the brake pedal. Select unbiased, release the parking brake, then launch the brake pedal and switch off the engine. To circulate lower back to regular operation, practice the parking brake and select out P on an automated gearbox.