

Comfort

Correct Driving Position

C3 Aircross Comfort for protection reasons, adjust the seats only whilst the automobile is desk bound. Before using, make the following changes in order: head restraint top, seat backrest attitude, seat cushion height, seat function, steering wheel attain and height, and rear-view and door mirrors. After making these changes, test that the instrument panel may be viewed correctly. The head restraint must be adjusted in order that its upper facet is stage with the top of the occupant's head. To improve it, pull it up to the favored role until it clicks.

To decrease it, press lug A and push it down. To dispose of a head restraint, pull it completely up, press lug A to launch it, then improve it fully and keep it securely. To refit it, insert the rods into the publications inside the seat backrest, push the top restraint down, press lug A and modify it to the correct top. Never drive with the pinnacle restraints removed. Before transferring the seat backwards, make sure there is no person or object in the back of it that would prevent the seat from shifting fully or purpose trapping or pinching.

Front Seats

For safety motives, alter the seats best when the vehicle is desk bound. Before riding, regulate the pinnacle restraint peak, backrest attitude, seat cushion top, seat role, steering wheel and mirrors. After making those adjustments, check that the tool panel may be viewed efficiently. The head restraint need to be adjusted so that its top side is level with the pinnacle of the occupant's head. To increase it, pull it as much as the favored function until it clicks. To lower it, press lug A and push it down. To put off a head restraint, pull it completely up, press lug A and raise it absolutely.

Store it securely. C3 Aircross Comfort to refit it, insert the rods into the courses in the seat backrest, push the top restraint down and regulate it to the perfect peak. Never drive with the pinnacle restraints removed. To alter the seat longitudinally, enhance the manage bar and slide the seat forwards or backwards. Release the bar to lock the seat in role. To alter the backrest attitude, push the manage backwards and tilt the backrest forwards or backwards. On the motive force's seat, use the control to elevate or decrease the seat to the required position.

The heated seats perform handiest when the engine is jogging and the out of doors temperature is under 20°C. Press the button to select the heating level. Each press changes the level, and the indicator lamps show the selected setting. To switch off the heating, press the button till all indicator lamps are off. Do now not use the heated seat when it's miles unoccupied. Do not region heavy or sharp gadgets at the seat, kneel or stand on it, spill liquids on it, or use the heating feature while the seat is damp.

Reduce the heating depth as soon as possible and switch it off whilst the seat and passenger compartment have reached a comfortable temperature. The rear head restraints have two positions. The excessive role is used while the seat is occupied. For stowing, press lug A and push the top restraint down. The rear head restraints can also be eliminated. Before moving the seat backwards, make certain there may be no person or object behind it that could prevent the seat from shifting absolutely or motive trapping or pinching.

Steering Adjustment

The heated steerage wheel warms its outer rim in bloodless weather. Depending at the united states of sale, the characteristic can be activated while the outdoor temperature is beneath 20°C. With the engine strolling, press the button to interchange the heating on or off.

The indicator lamp confirms whilst the function is lively. To get rid of the protective covers, fold down the corresponding 2d-row backrest. Pull every tab forwards to release it from its mounting. Store the eliminated parts in the boot floor region among the 0.33-row seats and the boot sill. To refit the protecting covers, fold down the corresponding 2d-row backrest. Insert every tab into its mounting and pull it backwards to stable it.

Mirrors

C3 Aircross Comfort to regulate the guidance wheel, make sure the vehicle is stationary. Pull the manage to launch the guidance wheel, alter its peak and attain to suit your using position, then push the manage back to lock it in region. The heated steerage wheel warms the outer a part of the wheel in bloodless weather. Depending at the u . S . , it is able to be activated whilst the outdoor temperature is underneath 20°C. With the engine jogging, press the button to

switch the function on or off. The indicator lamp shows while it is lively.

To do away with the removable protections, fold down the corresponding 2d-row backrest and pull every tab forwards to release it. Fold every component onto itself and keep it within the boot floor among the 1/3-row seats and the boot sill. To refit them, insert the tabs into their mountings and pull them backwards. Adjust the door mirrors to reduce blind spots. Remember that gadgets appear farther away than they honestly are, so take this into consideration while judging the gap of motors drawing near from at the back of.

To alter the electrical door mirrors, circulate manage A left or right to pick a reflect, then use manage B to alter its position. Return manipulate A to the vital position while completed. The mirrors can also be folded manually whilst wished.

Depending at the car model, computerized folding and unfolding may be configured via the device panel menu. To fold the mirrors electrically, vicinity control A in the critical position and pull it backwards. To unfold them from outside, free up the car. If the mirrors had been folded the usage of manipulate A, they'll no longer spread routinely whilst the car is unlocked.

Heating

The ventilation gadget takes in filtered air from out of doors through the grille at the bottom of the windscreen or recirculates air within the passenger compartment. The air is shipped through the windscreen and facet window vents, crucial and aspect air vents, and front footwell stores. The heating and manual air conditioning device operates in Accessories mode and when the engine is walking. Its principal controls will let you regulate air distribution, airflow and temperature, transfer the air conditioning on or off, pick out indoors air recirculation, and perform rear display demisting.

Turn the temperature manipulate from blue for cold air to red for hot air. Adjust the airflow to a comfortable degree and use the air distribution manipulate to direct air in the direction of the desired shops. Fresh outdoor air allows save you and clear mist from the windscreen and side windows. Interior air recirculation allows preserve polluted air out whilst using via heavy traffic or tunnels. However, keep away from the usage of recirculation for too long, as it may motive window misting and reduce air nice.

Keep the air consumption grilles, vents and air stores clean of obstructions. Do not cover the daylight sensor on the dashboard, as it enables control of the automated aircon system. When the automobile has been parked in direct daylight, ventilate the passenger compartment in brief before use. Keep the passenger compartment filter in accurate situation and update it regularly.

Have the air con system checked according to the producer's carrier agenda. In cars with Stop & Start or e-Auto, quickly deactivate the machine while essential to hold a cushty cabin temperature. In electric vehicles, ECO mode reduces electricity intake but additionally limits heating and air con overall performance.

Temperature

Temperature Pre-conditioning and [Interior](#) Features. The heated windscreen helps clear ice from the lower a part of the windscreen and the location beside the left windscreen pillar. It also helps launch frozen wiper blades and stops snow from constructing up round them.

With the engine walking, press the button to replace the feature on or off. It operates whilst the out of doors temperature is beneath 0°C and switches off mechanically when the engine is turned off. Rear screen demisting switches off mechanically relying on the out of doors temperature to save you excessive electric intake.

Electric motors can use temperature pre-conditioning to put together the passenger compartment earlier than a adventure. The temperature may be programmed via the My Citroen App, with a couple of programmes to be had. Temperature pre-conditioning operates while the ignition is off, the force selector is in Parking mode, the windows are closed and the car is locked. The battery fee should be above 30%. The function can function whether or not the automobile is connected or no longer.

The front courtesy lamp illuminates whilst the car is unlocked, a door is opened or the secret's eliminated from the ignition. It regularly switches off after the automobile is locked, the ignition is switched on or 20 seconds after the last door is closed. It can also be set to stay completely on or off. The the front reading lamps can be operated with the ignition on. The solar visors include

vanity mirrors with covers.

To open the glove box, lift its cover with. The glove box lights up when opened with the ignition on. Do not power with it open while a front passenger is seated. The 12 V accessory socket can be used to attach an accessory with a most rated electricity of 120 W, the usage of a suitable adapter.

Boot Fittings

The load space cover shelf has sections: a fixed phase with open garage and a movable phase that rises while the boot is opened. To cast off it, unhook the 2 cords, slightly boost the movable segment, release the constant phase from each side and raise out the shelf. C3 Aircross Comfort do no longer vicinity heavy gadgets on the load area cowl shelf, as they may turn out to be risky projectiles all through unexpected braking.

The boot hooks can be used to hold lightweight purchasing luggage. Depending on the version, the boot has a two-function floor to regulate the available storage area. The excessive function supports as much as one hundred kg and offers a flat floor whilst the rear seats are folded. The low function supports up to 150 kg and gives maximum boot space.

To exchange the ground peak, elevate it the usage of the principal handle and move it toward you. Adjust the floor the usage of the facet supports, then push it completely forwards into the specified position. To steady it at an angle, raise the ground from the high position and in shape it into the inclined role at the facet helps. The boot lamp switches on mechanically while the boot is opened and switches off while it's miles closed. Its lighting time depends at the car's running conditions.